


### Mitsubishi Evo V ECU Connections

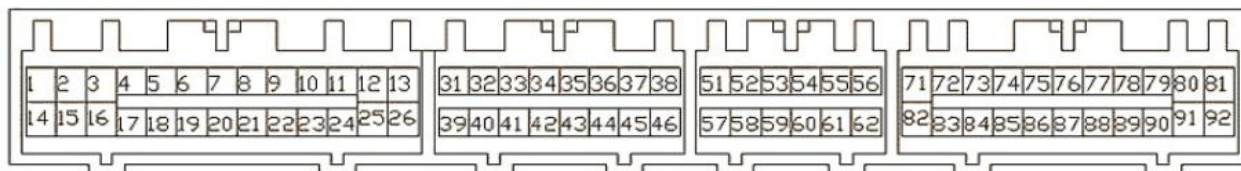

View on wire side

1 INJECTOR 1	Y - L		31 N/C		51 N/C		71 START	B - Y	
2 INJECTOR 3	L - G		32 N/C		52 N/C		72 AIR TEMP	R - L	
3 FUEL PRESS SOL	W - B		33 ALTERNATOR G	L - W		53 N/C	73 N/C		
4 IDLE SERVO 1	L - Y		34 N/C		54 N/C		74 N/C		
5 IDLE SERVO 4	W		35 N/C		55 N/C		75 N/C		
6 SEC AIR SOL	BR		36 ECU W/L	LG - B		56 DIAGNOSTICS (1)	LG	W	
7 N/C			37 PAS SWITCH	Y - B		57 N/C		W - L	
8 FUEL PUMP RELAY	B - L		38 ECU RELAY	R		58 TACHO	W	W	
9 N/C			39 FUEL PUMP (SPEED) L			59 N/C		W	
10 IGN COIL 1	B - Y		40 ALARM W/L	L - W		60 LAMBDA HEATER	R	R - B	
11 WASTE GATE SOL	BR - W		41 ALTERNATOR FR	W		61 N/C		G - L	
12 12V SW SUPPLY	R - Y		42 N/C			62 DIAGNOSTICS (7)	O	B - W	
13 GROUND	B		43 N/C					Y - G	
14 INJECTOR 2	Y - B		44 N/C					G - W	
15 INJECTOR 4	LG - W		45 A/C PRESS SW	G - B				Y - W	
16 N/C			46 N/C					Y	
17 IDLE SERVO 3	Y							Y - R	
18 IDLE SERVO 6	G							L - R	
19 AIR FLOW RESET	L							BR - G	
20 RAD & A/C FAN HI	L							W - R	
21 RAD FAN LO	L							B	
22 A/C COMP RELAY	G - W							B	
23 IGN COIL 2	B - G							B	
24 N/C								B	
25 12V SW SUPPLY	R - Y							B	
26 GROUND	B							B	