ENGINE LUBRICATION

CONTENTS

LUBRICANTS	2
ENGINE OIL COOLER	2

LUBRICANTS


Items		Capacity $dm^3 \{\ell\}$
Engine oil	Quantity in oil filter	0.3 {0.3}
	Quantity in oil cooler	0.16 {0.16}
	Total quantity	5.1 {5.1}
	Brand	DIA QUEEN MOTOR OIL (Grade SG or higher); or engine oil in a can marked with ILSAC certification.

ENGINE OIL COOLER

REMOVAL AND INSTALLATION

Pre-removal and Post-installation Operation

- (1) Engine Oil Removal and Refilling
- (2) Front Bumper Removal and Installation (Refer to GROUP 51.)

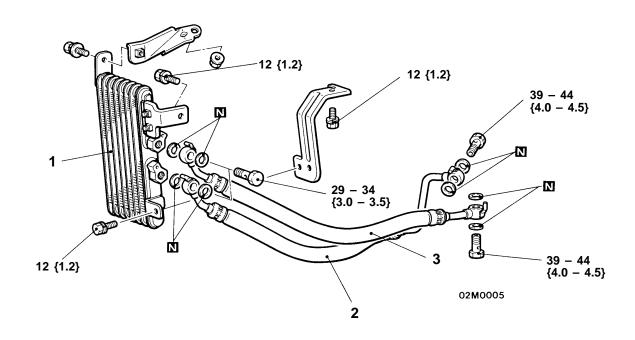

Unit: Nm {kgf·m}

Removal steps

- 1. Engine oil cooler
- 2. Feed hose assembly
- 3. Return hose assembly

INSTALLATION SERVICE POINT

►A FEED HOSE ASSEMBLY / RETURN HOSE ASSEMBLY INSTALLATION

Fit the hose joint positioning tab into the hole in oil cooler to secure the hose assembly in position.