

A			
A/C Switch.....	55-76	Replacement (rear suspension, upper arm).....	34-12
ABS		Replacement (rear suspension, trailing arm).....	34-15
Actuator Test.....	35B-107	Replacement (rear suspension, stabilizer bar).....	34-28
Circuit Diagram.....	90-104	Replacement (front suspension).....	33A-16
ECU, Check at Terminal.....	35B-108	Ball Joint Dust Cover Inspection	
Accelerator Cable		Steering.....	37-21
Check and Adjustment.....	17-4	Ball Joint Dust Cover Replacement	
Accelerator Cable and Pedal.....	17-5	Steering.....	37-45
Accessory Socket.....	54A-105	Ball Joint Seals	
Adhesive		Check.....	00-47
Body.....	42-70	Barometric Pressure Sensor	
Brakes (Basic).....	35A-37	Check.....	17-15
Engine.....	11A-65	Basic Brake System	
Engine Cooling.....	14-34	Diagnosis.....	35A-3
Engine Lubrication.....	12-7	Basic Idle Speed	
Engine Overhaul.....	11B-74	Adjustment.....	13A-760
Exterior.....	51-36	Battery	
Manual Transaxle Overhaul.....	22B-52	Check.....	54A-3
MFI.....	13A-785	Handling.....	00E-12
Propeller Shaft.....	25-13	Remedy for a Discharged Battery.....	35B-117
Rear Axle.....	27-54	Belt	
Steering.....	37-54	Water Pump and Generator Drive Belt Check.....	00-37
Adhesive Table.....	00-53	Belt, Timing	
Adhesives		Replace.....	00-37
Equipment.....	54A-151	BJ Boot	
Air Bag Module		Replacement.....	26-20
Disposal Procedures.....	52B-197	Bleeding	
Air Bag Module(s).....	52B-184	Brakes (Basic).....	35A-15
Air Cleaner.....	15-7	Power Steering.....	37-19
Air Cleaner Element		Blower.....	55-81
Replace.....	00-36	Blower Assembly.....	55-79
Air Conditioning		Blower Resistor	
Charging.....	55-71	Removal and Installation.....	55-82
Compressor Drive Belt Adjustment.....	55-71	Body	
Compressor Noise Check.....	55-74	Adhesive.....	42-70
Condenser and Condenser Fan Motor.....	55-92	Diagnosis.....	42-4
ECU Terminal Check.....	55-69	Sealant.....	42-70
Idle-up Operation Check.....	55-75	Boots	
Manual, Circuit Diagram.....	90-86	Driveshaft, Check.....	00-47
Performance Test.....	55-72	Brake Booster.....	35A-24
Power Relay Check.....	55-74	Brake Booster	
Pressure Switch Check.....	55-71	Operating Check.....	35A-14
Receiver Drier Test.....	55-71	Removal and Installation.....	35A-24
Refrigerant Leak Repair.....	55-73	Brake Disc	
Refrigerant Line.....	55-94	Pad Wear Check.....	00-46
Sight Glass Refrigerant Level Test.....	55-70	Runout Check and Correction.....	35A-20
Air Dam.....	51-8	Thickness Check.....	35A-19
Air Dam.....	51-7	Brake Fluid Level Sensor Check.....	35A-16
Antenna.....	54A-148	Brake Hoses	
Anti-Lock Braking System (ABS)		Check.....	00-46
Diagnosis.....	35B-4	Brake Pad	
Anti-Theft Code for Anti-Theft System		Wear Check.....	00-46
Procedure for Input.....	54A-143	Brake Pedal.....	35A-22
Audio System		Brake Pedal	
Circuit Diagram.....	90-100	Check and Adjustment.....	35A-12
Auto-tensioner		Removal and installation.....	35A-22
Check.....	11A-8	Brake Rotor	
		Disc, Check.....	35A-18
		Brake Warning Light	
		Circuit Diagram.....	90-72
		Brakes (Basic)	
		Adhesive.....	35A-37
		Sealant.....	35A-37
		Bumper	
		Front.....	51-2
		Rear.....	51-5

B

Backup Light	
Circuit Diagram.....	90-63
Ball Joint Dust Cover	
Inspection.....	34-7

C

Cable			
Accelerator	17-5		
Accelerator, Check and Adjustment	17-4		
Ignition, Replace	00-37		
Camshaft	11A-28		
Camshaft			
Overhaul	11B-29		
Camshaft Position Sensor	16-39		
Camshaft Position Sensor			
Check	16-35		
Canister			
Evaporative Emission	17-21		
Catalytic Converter	17-24		
Caution Labels	55-4		
Center Differential	22B-45		
Centermember	32-6		
Central Door Locking System	54B-82		
Central Door Locking System			
Circuit Diagram	90-78		
Diagnosis	42-23		
Centralized Junction			
Circuit Diagram	90-18		
Charge Air Cooler	15-8		
Charging System	16-2		
Charging System			
Circuit Diagram	90-31		
Diagnosis	16-4		
Check Valve			
Check	17-15		
Operating Check	35A-14		
Cigarette Lighter	54A-105		
Cigarette Lighter			
Circuit Diagram	90-103		
Clearance Around Hood			
Adjustment	42-6		
Clock	54A-106		
Clock			
Circuit Diagram	90-99		
Clock Spring	52B-184		
Clutch	21B-2		
Clutch			
Diagnosis	21A-2		
Inspection	21B-4		
Clutch Bleeding	21A-8		
Clutch Control	21A-12		
Clutch Control			
Inspection	21A-12		
Clutch Housing	22B-40		
Clutch Housing			
Disassembly and Assembly	22B-40		
Clutch Master Cylinder			
Inspection	21A-14		
Clutch Pedal	21A-10		
Clutch Pedal			
Check and Adjustment	21A-7		
Inspection	21A-11		
Clutch Release Cylinder	21B-6		
Clutch Release Cylinder			
Inspection	21B-7		
Column Switch	54A-100		
Column Switch			
Removal and Installation	54A-101		
Combination Meters	54A-54		
Combination Meters			
Removal and Installation	54A-81		
Compression Pressure			
Check	11A-14		
Compressor (A/C)			
Noise Check	55-74		
Compressor Assembly	55-87		
Connecting Rod			
Overhaul	11B-54		
Connector Inspection	00E-2		
Control Housing	22B-37		
Control Housing			
Disassembly and Assembly	22B-37		
Control Unit Location	70-12		
Coolant			
Engine, Change	00-44		
Cooling System			
Circuit Diagram	90-42		
Crankcase Ventilation System			
Check	17-11		
Crankshaft			
Overhaul	11B-63		
Crankshaft Oil Seal	11A-41		
Crankshaft Position Sensor	16-40		
Crankshaft Position Sensor			
Check	17-19		
Crankshaft Pulley	11A-26		
Crossmember	33A-23		
Crossmember			
Inspection	32-11		
Cylinder Block			
Overhaul	11B-63		
Cylinder Head			
Overhaul	11B-35		
Cylinder Head Gasket	11A-44		

D

Diagnosis			
Anti-Lock Braking System (ABS)	35B-4		
Basic Brake System	35A-3		
Body	42-4		
Central Door Locking System	42-23		
Charging System	16-4		
Clutch	21A-2		
Door	42-23		
Emission Control System	17-7		
Engine	11A-2		
Engine Control System	17-3		
Engine Cooling	14-3		
Front Axle	26-2		
Front Suspension	33A-3		
Fuel Supply	13B-2		
Immobilizer System	54A-7		
Intake and Exhaust	15-2		
Keyless Entry System	42-54		
Manual Transaxle	22A-4		
Multiport Fuel Injection (MFI)	13A-6		
Parking Brake	36-2		
Power Steering	37-3		
Power Window	42-23		
Propeller Shaft	25-2		
Radio With Tape Player and CD Player, Speaker and Antenna	54A-107		
Rear Axle	27-2		
Rear Suspension	34-4		
Seat Belt	52A-2		
SRS Air Bag	52B-20		
Starting System	16-22		
Sunroof	42-60		
SWS	54B-6		
Tire	31-2		
Trouble Code, ABS	35B-4		
Trunk Lid	42-47		
Wheel	31-2		

Window Glass.....	42-13	Check for Leaks.....	00-36
Differential Carrier		Engine	
Rear.....	27-28	Adhesive.....	11A-65
Differential Carrier Oil Seal		Assembly.....	11A-18
Replacement.....	27-13	Auto-tensioner.....	11A-8
Differential Support Member Bushing		Compression Pressure.....	11A-14
Replacement.....	27-30	Crankshaft Oil Seal.....	11A-41
Disc Brake		Cylinder Head Gasket.....	11A-44
Pad Wear Check.....	00-46	Diagnosis.....	11A-2
Disc Brake Assembly		Drive Belt.....	11A-7
Front.....	35A-27	Idle Mixture.....	11A-12
Rear.....	35A-31	Idle Speed.....	11A-13
Disc Brake Pad		Ignition Timing.....	11A-11
Check and Adjustment.....	35A-16	Lash Adjuster.....	11A-15
Disc Brake Rotor		Manifold Vacuum.....	11A-15
Check.....	35A-18	Sealant.....	11A-65
Dome Light.....	54A-95	Tightening Specification(s).....	11A-63
Door.....	42-23	Timing Belt.....	11A-50
Removal and installation.....	42-34	Engine Control.....	17-3
Door		Engine Control System	
Diagnosis.....	42-23	Diagnosis.....	17-3
Front and Rear, Fit Adjustment.....	42-29	Engine Coolant	
Glass and Regulator.....	42-36	Change.....	00-44
Handle and Latch.....	42-41	Concentration Check.....	14-19
Inside Handle Play Adjustment.....	42-33	Leak Check.....	14-17
Mirror.....	51-31	Replacement.....	14-18
Opening Weather-strip.....	42-45	Engine Coolant Temperature Gauge Unit	
Outside Handle Play Adjustment.....	42-33	Check.....	54A-80
Switch Check.....	42-35	Engine Coolant Temperature Sensor	
Door Trim		Check.....	17-19
Removal and Installation.....	52A-13	Check.....	13A-769
Drive Belt		Engine Cooling	
Power Steering, Tension Check.....	37-18	Adhesive.....	14-34
Tension Check and Adjustment.....	11A-7	Diagnosis.....	14-3
Water Pump and Generator Drive Belt Check.....	00-37	Sealant.....	14-34
Drive Plate		Engine Lubrication	
Overhaul.....	11B-63	Adhesive.....	12-7
Driveshaft		Sealant.....	12-7
BJ Boot Replacement.....	26-20	Tightening Specification(s).....	12-7
Front Axle.....	26-13	Engine Mounting.....	32-3
Rear Axle.....	27-21	Engine Mounting	
Driveshaft Boots		Inspection.....	32-4
Check.....	00-47	Engine Oil	
Drum		Change.....	00-40
Inspection.....	36-9	Check.....	12-3
		Replacement.....	12-3
		Engine Oil Cooler.....	12-6
		Engine Oil Filter	
		Change.....	00-41
		Replacement.....	12-4
		Engine Oil Pressure	
		Check.....	12-4
		Engine Overhaul	
		Adhesive.....	11B-74
		Sealant.....	11B-74
		Tightening Specification(s).....	11B-69
		Engine Roll Stopper.....	32-6
		Engine-ECU.....	13A-783
		ETACS	
		Enabling/Disabling the Answerback Function.....	42-55
		Evaporative Emission Canister.....	17-21
		Evaporative Emission Control System.....	17-12
		Evaporative Emission Control System	
		Check for Clogging.....	00-36
		Check for Leaks.....	00-36
		Purge Solenoid Check.....	17-14
		Evaporative Emission Purge Solenoid	
		Check.....	13A-776
		Evaporative Emission Ventilation Solenoid	
		Check.....	13A-776
		Check.....	17-15
E			
ECU Terminal			
Check.....	54B-538		
EGR			
Solenoid Check.....	13A-776		
EGR solenoid			
Check.....	13A-776		
EGR System.....	17-16		
EGR System			
Check.....	17-17		
Port Vacuum Check.....	17-18		
Solenoid Check.....	17-18		
Valve Check.....	17-18		
Electrical System			
Check.....	00E-13		
Element, Air Cleaner			
Replace.....	00-36		
Emission Control.....	17-7		
Emission Control System			
Diagnosis.....	17-7		
Emission Control System, Evaporative			
Check for Clogging.....	00-36		

Hub			
Front Axle	26-8		
Rear Axle.....	27-14		
Hub Bolt			
Replacement (front axle)	26-7		
Replacement (rear axle).....	27-13		
Hub End Play			
Check	26-6		
Hydraulic Unit	35B-118		
Hydraulic Unit Check			
ABS	35B-114		
I			
Idle Mixture			
Check	11A-12		
Idle Speed			
Basic, Adjustment.....	13A-760		
Check	11A-13		
Idle Speed Control Motor			
Check	13A-774		
Ignition Cable			
Replacement	00-37		
Ignition Coil.....	16-39		
Ignition Coil			
Check	16-33		
Ignition Key Reminder Warning Buzzer			
Circuit Diagram.....	90-122		
Ignition Switch	54A-5		
Ignition System.....	16-32		
Ignition System	11B-5		
Ignition system	13A-688		
Ignition System			
Circuit Diagram.....	90-30		
Ignition Timing			
Check	11A-11		
Immobilizer System			
Circuit Diagram.....	90-116		
Diagnosis.....	54A-7		
Injector.....	13A-777		
Injector			
Check	13A-773		
Input Shaft	22B-14		
Input Shaft			
Inspection	22B-21		
Inside Rear View Mirror	52A-19		
Inspection Terminal Location.....	70-7		
Instrument Panel	52A-3		
Instrument Panel Inspection.....	00E-8		
Intake Air Temperature Sensor			
Check	13A-769		
Check	17-15		
Intake and Exhaust			
Diagnosis.....	15-2		
Intake Manifold	15-13		
Intake Manifold	11B-23		
Intake Manifold Vacuum			
Check	15-4		
Interior Light	54B-392		
Interlock Switch			
Check and Adjustment	21A-9		
Operating Check.....	21A-9		
J			
Joint Connector	90-12		
Junction Block	90-10		
K			
Keyless Entry System (SWS).....	54B-171		
Keyless Entry System.....	42-54		
Keyless Entry System			
Diagnosis	42-54		
Secret Code Registration.....	42-58		
Transmitter Battery Replacement	42-55		
Keyless Entry System Timer			
Lock Function Inspection.....	42-55		
Knock Sensor	16-41		
Knuckle			
Inspection	27-20		
Rear Axle	27-19		
L			
Lash Adjuster			
Check.....	11A-15		
Leveling Valve			
Check.....	13B-13		
License Plate Light	54A-97		
License Plate Light			
Circuit Diagram.....	90-50		
Lighting Monitor Buzzer			
Circuit Diagram	90-118		
Lighting System			
Diagnosis	54A-83		
Lower Arm	33A-14		
Lower Arm			
Inspection	33A-15		
Lower Arm Ball Joint			
End Play Check	33A-8		
Lower Arm Bushing			
Replacement.....	33A-17		
Luminous Intensity			
Measurement.....	54A-89		
M			
Main Muffler	15-23		
Maintenance			
Air Cleaner Element.....	00-36		
Ball Joint and Steering Linkage Seals	00-47		
Brake Hoses	00-46		
Disc Brake Pads	00-46		
Drive Belt	00-37		
Driveshaft Boots	00-47		
Electrical System	00E-13		
Engine Coolant	00-44		
Engine Oil	00-40		
Engine Oil Filter	00-41		
Evaporative Emission Control System.....	00-36		
Exhaust System.....	00-40		
Fuel Hose	00-35		
Fuel System.....	00-35		
Ignition Cable.....	00-37		
Spark Plug	00-36		
SRS	00-48		
Timing Belt	00-37		
Transfer Oil	00-43		
Manifold Vacuum			
Check.....	11A-15		

Manual A/C			
Diagnosis	55-5		
Manual Transaxle			
Diagnosis	22A-4		
Manual Transaxle (Transmission)			
Oil Level Check	00-42		
Manual Transaxle Overhaul			
Adhesive	22B-52		
Sealant	22B-52		
Mark	51-29		
Master Cylinder	35A-24		
Master Cylinder			
Function Check	35A-21		
Master Cylinder Assembly	35A-24		
Master Cylinder Assembly			
Disassembly and Assembly	35A-26		
Inspection	35A-27		
Meter			
Circuit Diagram	90-68		
MFI			
Adhesive	13A-785		
Sealant	13A-785		
Tightening Specification(s)	13A-783		
MFI System			
Circuit Diagram	90-32		
Mirror			
Door	51-31		
Remote Controlled, Circuit Diagram	90-91		
Module			
Fuel Pump	13B-18		
Molding	51-7		
Mounting			
Engine	32-3		
Transaxle	32-5		
Multipoint Fuel Injection			
Diagnosis	13A-6		
Multipoint Fuel Injection Relay			
Continuity Check	13A-767		
O			
Oil			
Engine, Change	00-40		
Engine, Check	12-3		
Engine, Replacement	12-3		
Transfer, Change	00-43		
Oil Cooler			
Engine	12-6		
Oil Filter			
Engine, Replacement	12-4		
Oil Pan	11A-38		
Oil Pan			
Inspection	11A-40		
Overhaul	11B-44		
Oil Pressure			
Engine, Check	12-4		
Oil Pump			
Overhaul	11B-44		
Power Steering	37-46		
Power Steering, Pressure Test	37-19		
Oil Seal			
Crankshaft	11A-41		
Oil Warning Light			
Circuit Diagram	90-72		
Output Shaft	22B-23		
Output Shaft			
Inspection	22B-31		
Oxygen Sensor			
Check	13A-771		
P			
Parking Brake			
Cable	36-7		
Diagnosis	36-2		
Lever	36-6		
Lever Stroke Check and Adjustment	36-4		
Lining and Drum	36-8		
Lining Running-in	36-5		
Switch Check	36-5		
Parking Brake Lining			
Inspection	36-9		
PCV (Positive Crankcase Ventilation) System	17-10		
PCV (Positive Crankcase Ventilation) System			
Valve Check	17-11		
Pedal			
Accelerator	17-5		
Piston			
Overhaul	11B-54		
Position Light	54A-83		
Position Light			
Circuit Diagram	90-50		
Power Distribution System			
Circuit Diagram	90-24		
Power Steering			
Bleeding	37-19		
Diagnosis	37-3		
Drive Belt Tension Check	37-18		
Fluid Level Check	37-18		
Fluid Replacement	37-18		
Hoses	37-48		
Oil Pump Assembly	37-46		
Oil Pump Pressure Test	37-19		
Pressure Switch Check	37-20		
Power Steering Diagnosis	37-3		
Power Steering Gear Box	37-29		
Power Steering Linkage	37-29		
Power Steering Oil Pump Assembly			
Inspection	37-48		
Power Window			
Circuit Breaker Inspection	42-32		
Circuit Diagram	90-74		
Diagnosis	42-23		
Operating Current Check	42-32		
Relay Check	42-32		
Power Windows	54B-114		
Printed-Heater Lines			
Check	54A-149		
Propeller Shaft	25-4		
Propeller Shaft			
Adhesive	25-13		
Diagnosis	25-2		
Sealant	25-13		
Purge Control System			
Check	17-13		
R			
Radiator	14-22		
Radiator Cap			
Pressure Check	14-18		
Radio	54A-107		
Radio With Tape Player and CD Player, Speaker and Antenna			
Diagnosis	54A-107		
Rear Axle			
Adhesive	27-54		
Diagnosis	27-2		
Driveshaft	27-21		
Gear Oil Level Check	27-12		
Hub	27-14		

Knuckle.....	27-19	Seat Belts With Pre-Tensioner	
Sealant	27-54	Check.....	52B-196
Total Backlash Check	27-12	Select Lever.....	22B-36
Wheel Bearing End Play Check	27-12	Sensor	
Rear axle oil		Barometric Pressure, Check.....	17-15
Level Check.....	00-47	Camshaft Position.....	16-39
Rear Combination Light.....	54A-94	Camshaft Position, Check	16-35
Rear Floor Console	52A-8	Crankangle, Check	16-35
Rear Seat	52A-22	Crankshaft Position.....	16-40
Rear Seat Belt.....	52A-25	Crankshaft Position, Check	17-19
Rear Spoiler.....	51-12	Engine Coolant Temperature, Check.....	17-15
Rear Suspension.....	34-8	Engine Coolant Temperature, Check.....	13A-769
Rear Suspension		Fuel Tank Differential Pressure, Check	17-15
Diagnosis.....	34-4	Intake Air Temperature, Check	13A-769
Rear Washer	54B-243	Intake Air Temperature, Check	17-15
Rear Wheel Alignment		Knock.....	16-41
Check and Adjustment	34-6	Oxygen, Check	13A-771
Rear Window Defogger.....	54A-149	Throttle Position, Adjustment.....	13A-758
Rear Window Defogger		Throttle Position, Check.....	13A-770
Circuit Diagram.....	90-95	Volume Air Flow, Check.....	17-15
Rear Window Glass.....	42-20	Wheel Speed, Output Voltage Check	35B-112
Rear Wiper.....	54B-243	Sensor Location.....	70-8
Rear Wiper and Washer		Shift Lever Assembly	22A-14
Inspection	51-27	Shift Lever Assembly	
Receiver Drier Test (A/C)	55-71	Disassembly and Assembly.....	22A-14
Relay		Shock Absorber	34-21
Check	00E-10	Shock Absorber Assembly	
Relay Location.....	70-6	Disassembly and Assembly.....	34-22
Replaceable Bulb		Side Marker Light	
Replacement	54A-90	Circuit Diagram	90-50
Resistive Cord		Sight Glass (Refrigerant Level Test).....	55-70
Inspection	16-34	Solenoid	
Reverse Idler Gear.....	22B-34	EGR, Check.....	13A-776
Rheostat	54A-99	EGR, Check.....	17-18
Rheostat		Evaporative Emission Purge, Check	13A-776
Circuit Diagram.....	90-127	Evaporative Emission Ventilation, Check	13A-776
RKE (Keyless Entry System).....	42-54	Solenoid Location.....	70-16
RKE (Keyless Entry System)		Solenoid Valve Location	70-16
Secret Code Registration	42-58	Spark Plug	
Transmitter Battery Replacement.....	42-55	Check and Adjustment.....	16-35
Rocker Arm		Replace.....	00-36
Overhaul.....	11B-29	Speaker	54A-147
Roof Lid Glass		Speaker	
Operation Check.....	42-62	Test	54A-145
		Specifications.....	34-29
		Speedometer Check	
		Check.....	54A-77
		Speedometer Gear	22B-35
		SRS	
		Circuit Diagram	90-110
		Maintenance	52B-174
		Maintenance	00-48
		SRS Air Bag	
		Diagnosis.....	52B-20
		SRS Control Unit (SRS-ECU).....	52B-182
		SRS Warning Light Check	52B-23
		Stabilizer Bar (front).....	33A-19
		Stabilizer Bar (rear).....	34-26
		Stabilizer Bar	
		Removal and Installation	34-26
		Starter Motor	
		Assembly	16-24
		Starter Relay	
		Check.....	16-23
		Starting System	16-21
		Starting System	
		Circuit Diagram.....	90-29
		Diagnosis	16-22
		Steering	
		Adhesive	37-54
		Ball Joint Dust Cover Inspection.....	37-21

S

Sealant	
Body	42-70
Brakes (Basic)	35A-37
Engine	11A-65
Engine Cooling	14-34
Engine Lubrication.....	12-7
Engine Overhaul.....	11B-74
Equipment	54A-151
Exterior	51-36
Manual Transaxle Overhaul	22B-52
MFI	13A-785
Propeller Shaft.....	25-13
Rear Axle.....	27-54
Steering	37-54
Sealant Table.....	00-53
Seat Belt	
Diagnosis.....	52A-2
Seat Belt Pre-Tensioner	
Disposal Procedures	52B-197
Seat Belt Warning Light.....	54B-266
Seat Belt Warning Light	
Circuit Diagram.....	90-120
Seat Belts With Pre-Tensioner	52B-192

V

Vacuum Check	
EGR Port	17-18
Vacuum Circuit Diagram.....	17-9
Vacuum Hose	
Check	17-10
Vacuum Hose Routing.....	17-8
Vacuum Hoses	17-8
Valve	
EGR System, Check.....	17-18
Fuel Tank Pressure Relief	17-21
Fuel Tank Pressure Relief, Inspection	17-22
Valve Stem Seal	11A-28
Vehicle Identification.....	00-16
Vehicle Identification Code Plate.....	00-17
Vehicle Speed Sensor	54A-81
Ventilators.....	55-95
Volume Air Flow Sensor	
Check	17-15

W

Waste Gate Actuator	
Check	15-4
Water Hose.....	11B-27
Water Hose.....	14-29
Water Pipe.....	14-29
Water Pump.....	14-27
Water Pump.....	11B-27
Wheel	31-6
Wheel	
Balance Accuracy.....	31-3
Diagnosis.....	31-2
Runout Check.....	31-6
Wheel Bearing End Play Check	27-12
Wheel Speed Sensor	
Output Voltage Check.....	35B-112
Wind Noise	
How to Locate.....	42-27
Window Glass	42-12
Window Glass	
Diagnosis.....	42-13
Door, Adjustment	42-30
Runchannel	42-45
Windshield.....	42-15
Windshield	
Wiper and Washer.....	51-14
Windshield Washer (SWS)	54B-205
Windshield Wiper (SWS).....	54B-205
Windshield Wiper	51-16
Windshield Wiper and Washer	
Circuit Diagram.....	90-92
Wiper and Washer	
Rear.....	51-24
Rear, Circuit Diagram	90-96
Windshield	51-14

NOTES