

# 2003 **MITSUBISHI LANCER EVOLUTION VIII SERVICE MANUAL**

## Volume 3

### FOREWORD

This service manual is subdivided into various group categories. Each section contains diagnostic, disassembly, repair, and installation procedures, along with complete specifications and tightening references. Use of this manual will aid in properly performing any service necessary to maintain or restore the high levels of performance and reliability designed into this Mitsubishi vehicle.

This manual is designed for use with the 2003 LANCER EVOLUTION VIII Service Manual Volume 1, and Volume 2, and the 2003 LANCER EVOLUTION VIII Body Repair Manual to provide complete service information for the 2003 LANCER EVOLUTION VIII.

When reference is made in this manual to a brand name, number, or specific tool, an equivalent product may be used in place of the recommended item. All information, illustrations and specifications contained in this manual are based on the latest product information available at the time of publication approval. The right is reserved to make changes at any time without notice.



No part of this publication may be reproduced, stored in any retrieval system of transmitted, in any form or by any means, including but not limited to electronic, mechanical photocopying, recording or otherwise, without the prior written permission of Mitsubishi Motors Corporation.

©2003 Mitsubishi Motors Corporation  
 All Rights Reserved  
 Printed in USA  
 MSSP-206B-2003 (3/3)

## GROUP INDEX

Chassis Electrical . . . . .	<b>54</b>
Heater, Air Conditioning and Ventilation . . . . .	<b>55</b>
Component Locations . . . . .	<b>70</b>
Configuration Diagrams and Splice Locations . . . . .	<b>80</b>
Circuit Diagrams . . . . .	<b>90</b>
<b>Alphabetical Index . . . . .</b>	<b></b>

**NOTE:**

For the information on all service manual groups not listed above, please refer to Volume 1, and 2.

 **WARNING**

Proper service methods and repair procedures are necessary for the safe, reliable operation of all motor vehicles as well as the personal safety of the person doing the repair. There are many types of procedures, techniques, tools, and parts for servicing vehicles, as well as differences in the skills of the people doing the work. This manual cannot give advice or precautions for every possible situation. Because of this, anyone who does not follow the instructions in this manual must first make sure that the choice of methods, tools, or parts will not cause damage to the vehicle or injury to the person doing the work. The following list contains general precautions that should always be followed while working on a vehicle.

- Always wear safety glasses for eye protection.
- Use safety stands whenever a procedure requires work under the vehicle.
- Be sure the ignition switch is always "off" unless otherwise specified by a procedure.
- Set the parking brake when working on a vehicle.
- Operate the engine only in a well-ventilated area.
- Keep clear of moving parts when the engine is running.
- To prevent serious burns, avoid contact with hot metal parts such as the radiator, exhaust manifold, tail pipe, catalytic converter and muffler.
- Do not smoke while working on or near a vehicle.

# CALIFORNIA PROPOSITION 65 WARNING

## **WARNING**

- *This product contains or emits chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.*

## **WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES**

### **WARNING**

- *Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).*
- *If heat damage may occur during paint work, remove the SRS-ECU, the air bag module (driver's side and front passenger's side), the clock spring, the seat belt with pre-tensioner. Recheck the SRS system operability after reinstalling them.*
  - *SRS-ECU, air bag module (driver's side and front passenger's side), clock spring: 93°C (200°F) or more*
  - *Seat belt with pre-tensioner: 90°C (194°F) or more*
- *Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.*
- *MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B, Supplemental Restraint System (SRS), before beginning any service or maintenance of any component of the SRS or any SRS-related component.*

### NOTE

Section titles with the asterisks (\*) in the table of contents in each group indicate operations requiring warnings.

# MITSUBISHI PUBLICATION COMMENT FORM

Use this form to advise us of any errors you might find in this publication. We also welcome your suggestions that might help us improve Mitsubishi publications.

Publication that contains error: \_\_\_\_\_

Page number where the error appears: \_\_\_\_\_

Figure number where the error appears: \_\_\_\_\_

Vehicle application and system identification: \_\_\_\_\_

Describe, in detail, the error found or your suggestion. Please attach additional pages as necessary.

\_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_

Dealer \_\_\_\_\_ Dealer Code \_\_\_\_\_

From: Name \_\_\_\_\_

City/Town \_\_\_\_\_ State \_\_\_\_\_ Zip Code \_\_\_\_\_

Signature \_\_\_\_\_ Date \_\_\_\_\_ Phone \_\_\_\_\_

Mail To: Mitsubishi Motor Sales of America, Inc.  
 6400 Katella Avenue  
 P.O. Box 6400  
 Cypress, California 90630-0064  
 Attn: Technical Information Dept.

Fax to: Mitsubishi Motor Sales of America, Inc.  
 Technical Information Dept.  
 (714) 373-1021